


Varilight Freestyle - Create your own switch designs

To create your own design, remove the clear faceplate [C] carefully by gently pulling away the clips on adjacent sides of the clear frame [A] and gently pushing from the back.

Use the reverse of the printed card [B] as a template to create your own design or cut photos, wallpaper, etc. to size. (You may find it easier to draw around the clear faceplate on the back of your photo or wallpaper and then cut with scissors or a craft knife on a suitable surface).

Put your design in place and clip the clear faceplate back into the clear frame to secure.

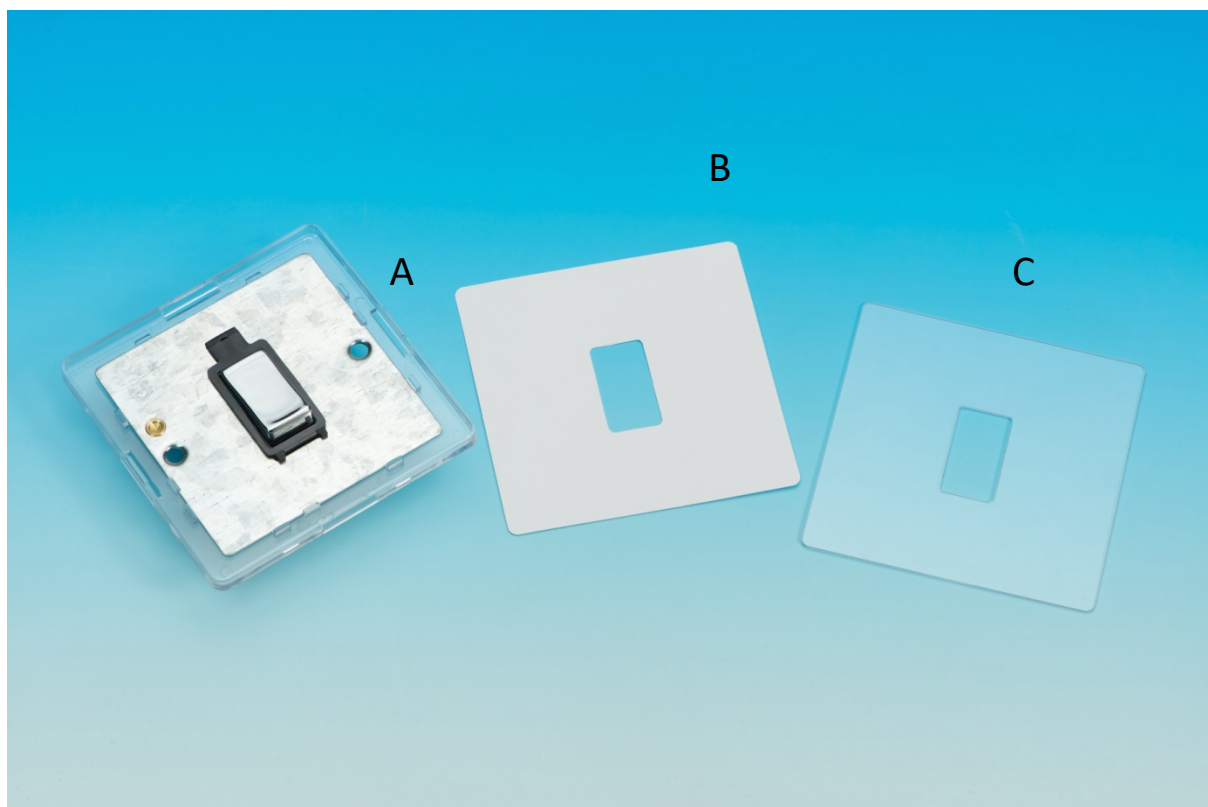

Registration Number: XIF001

Doyle & Tratt Products Ltd, Carylls Lea, Faygate, Horsham, W. Sussex,
RH12 4SJ, UK. +44 (01293) 223333

Varilight Europe Kft, 2600 Vác, Althann Mihály Frigyes utca 2, Hungary