

Varilight Freestyle - Create Your Own Switch Designs

To personalise your switch, remove the clear faceplate [C] carefully by gently releasing the clips on opposite sides of the clear frame [A] and pushing gently from the back.

If you have a printed card [B], you can use it as a cutting guide.

Not all Freestyle products include printed cards. If yours did not include one, simply use the **clear faceplate itself as a template** to cut your own design (e.g. from photos, wallpaper, or decorative paper).

For best results, place the faceplate over your chosen material, trace around it, and then cut carefully using scissors or a craft knife on a suitable surface.

Once your design is ready, position it in place and clip the clear faceplate back into the frame to secure.



Reg Number: XIF003

Doyle & Tratt Products Ltd, Carylls Lea, Faygate, Horsham, W. Sussex, RH12 4SJ, UK. +44 (01293) 223333
Varilight Europe Kft, 2600 Vác, Althann Mihály Frigyes utca 2, Hungary